

Locking Pin Directions



larger hole 1st



smaller hole 2nd




TO ENGAGE:

Place bit ring or connector between Rommel forks. Insert pin through larger of the two holes first. There should be **no resistance** passing through first (larger) hole. Push pin through second (smaller) hole. Spring wedge will depress and snap out on the other side. **Listen for a 'click'** and ensure wedge has fully snapped back out before use.

WARNING:

Failure to correctly engage the pin may result in rein detaching from bit and potential injury.

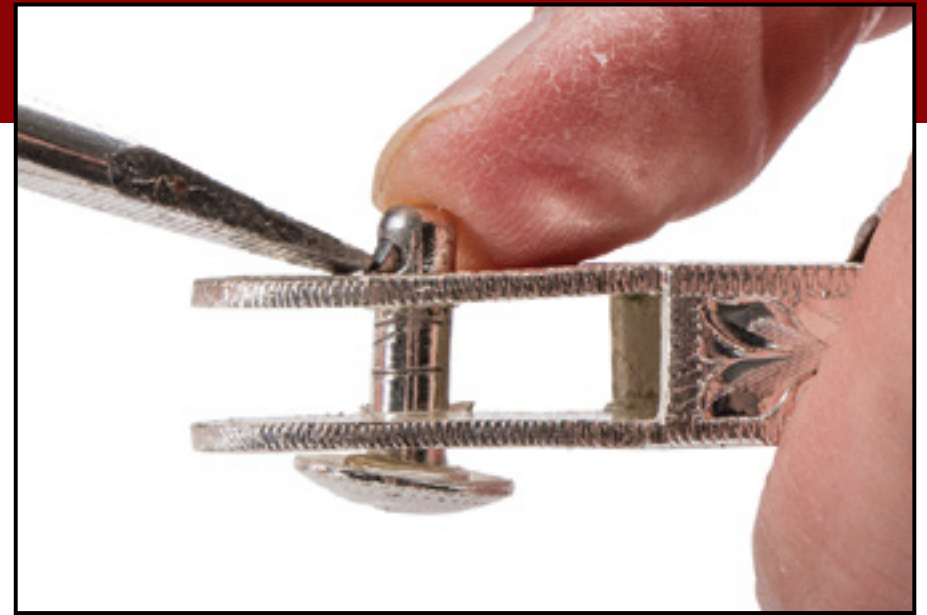

TO OPEN:

Use your fingernail or a small flat screwdriver, depress the small wedge while pushing the pin back out. Once out of smaller hole, there should be no resistance as pin passes through second (larger) hole.

HELPFUL HINT:

Bits and reins are often exposed to moisture. Occasionally apply a drop of oil to the pin wedges to maintain the spring's integrity.

sstack.com

SCHNEIDERS